



ITEM	DESCRIPTION	PART No
1	Potentiometer	1415010
-	Knob for Item 1	500/11003
2	On/Off Switch	1411458
3	Fault Indicator	1413447
4	Side Panel	1415011
5	Side Panel	1415012
6	Six Position Switch	1411459
-	Knob for Item 6	1413442

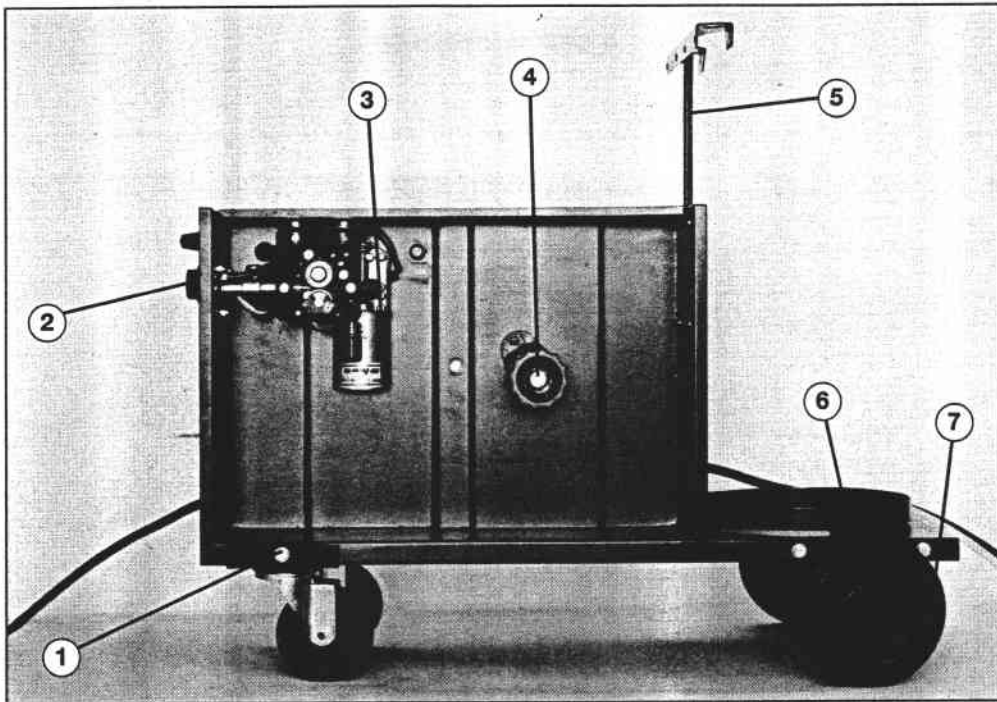


ITEM	DESCRIPTION	PART No
1	Castor Assembly	1415006
2	Central Adaptor	1413108
3	Wire Feed Motor	1415007
4	Reel Hub Assembly	1411467
5	Cylinder Support	1415008
6	Axle & Rear Wheel Assembly	1415009
7	Wheel	1413488

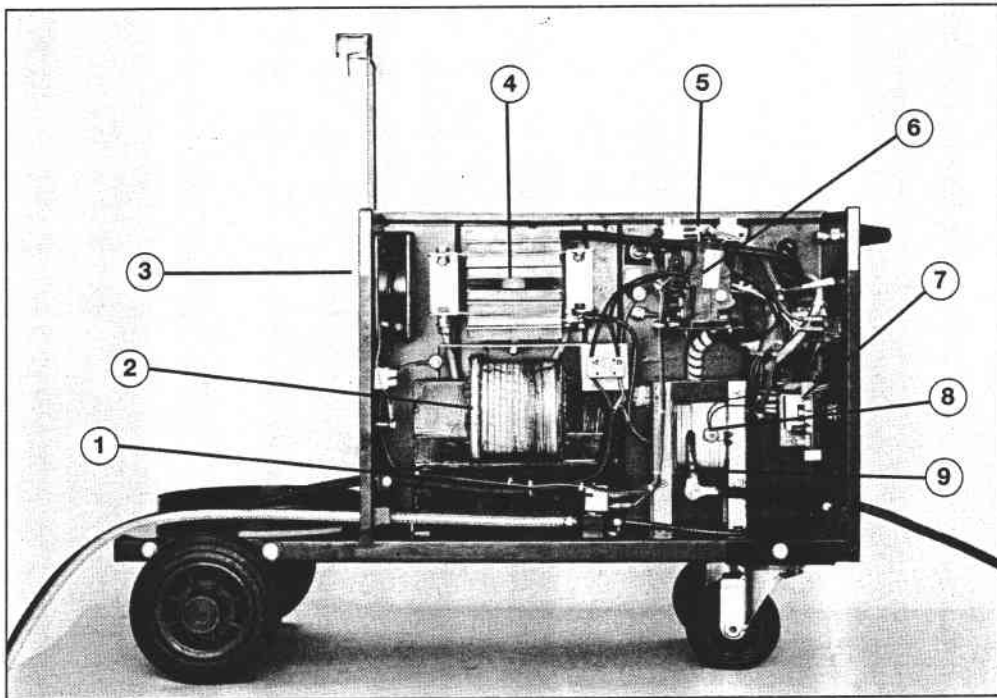

ITEM	DESCRIPTION	PART No
1	Solenoid Valve	1411464
2	Main Transformer	1415013
3	Fan	1411477
4	Diode Bridge	1415014
5	Auxilliary Transformer	1415015
6	Contactor	1411456
7	P.C.B	1415016
8	Thermostat	1415017
9	Inductor	1415018
-	Fuse 3.15A 20 x 5mm	1411486
-	Fuse 1.6A	1415019

Fuse Holder for 1411486 is 1411514.

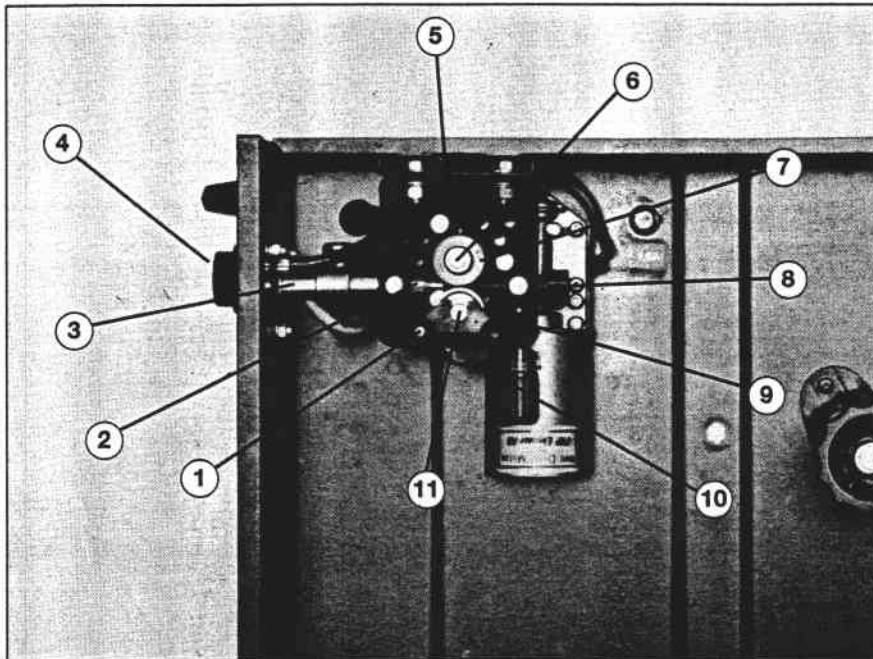

ITEM	DESCRIPTION	PART No
1	Locating Pin (Pressure Arm)	1415002 <i>NA</i>
2	Guide Tube Liner	1413456
3	Guide Tube	1413454
4	Central Adaptor	1413108
5	Feedplate	1413874
6	Feed Roll Retaining Screw	1413104
-	Woodruff Key	1411549
7	Feed Roll 0.6/0.8 (H)	1411470
-	Feed Roll 1.0mm (S)	1411489
	Note (Aluminium Only)	
8	Inlet Guide	1413103
9	Locating Pin (Pressure Device)	1413861
10	Pressure Device	1413897
11	Pressure Arm Complete	1415001